

## The Sensor Connection

42690 Woodward Avenue, Suite 200 • Bloomfield Hills, MI 48304 USA  
Phone: 248-636-1515 • Fax: 248-636-4969  
Email: sales@HGSIND.com • Web: www.HGSIND.com

---

### RTTC-WS Ring Terminal Thermocouple Installation:

1. Remove bolt
2. Place ring terminal under bolt head bending slightly if necessary (be careful not to break the ring terminal)
3. Make sure the ring terminal sits flat against the bolt head surface
3. Reinstall bolt
4. Proper position of ring terminal should not interfere with any other components
5. Tighten bolt to manufacturers' specifications

