

 
The Sensor Connection

42690 Woodward Avenue, Suite 200 · Bloomfield Hills, MI 48304 USA Phone: 248-636-1515 · Fax: 248-636-4969 Email: Sales@HGSIND.com · Web: www.HGSIND.com

WPTC-ST Weld Pad Installation Guide:


- 1. Pad can be clamped onto pipe surface with a clamp.
- 2. Pad can be brazed onto surface along its outer edges.
- 3. Pad can be spot welded along edges, starting in the center and working out towards outer edges, as shown below:

Spot Welding:



Correct Bending of Flexible Stem:



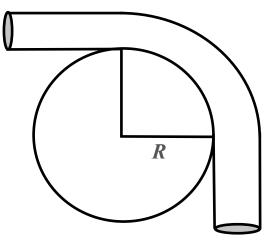

Minimum Bend Radius (**R**) = 3/16" (0.187")

Incorrect Bending of Flexible Stem:



