



# Mini Connector Strain Relief Bracket Assembly Instructions

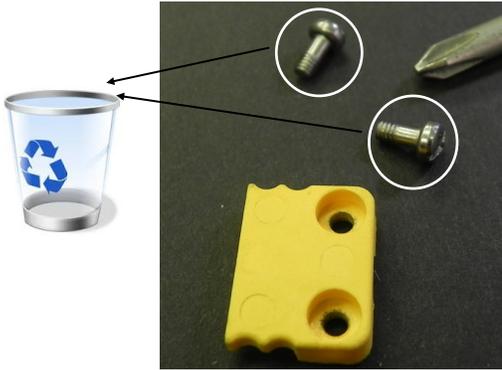


Remove both screws from cover and discard.

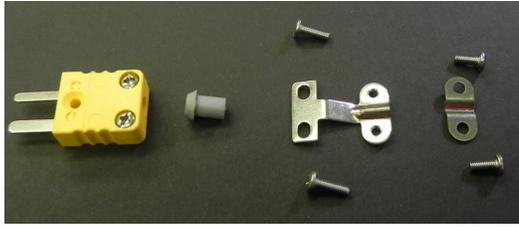

Remove cover of connector.




Loosen screw terminals that hold wire in place.

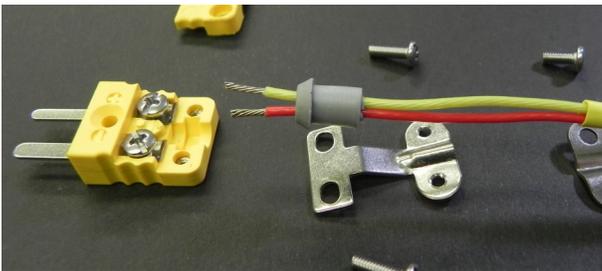

Slide grommet over wire.



Secure wires under screw terminals.

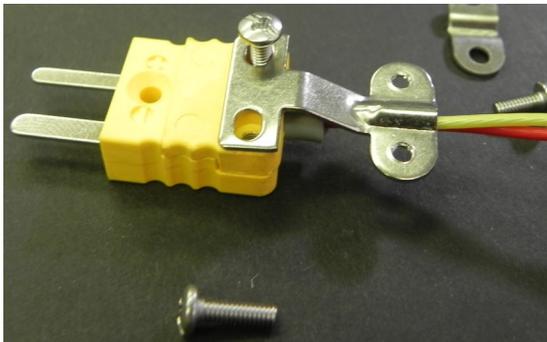

Replace cover, place strain relief on top of cover, and secure using long pair of screws.



Flip connector over and using short screws, tighten small clamp, securing both wires. Complete!



Harold G. Schaevitz Industries LLC

42690 Woodward Avenue, Suite 200 · Bloomfield Hills, MI 48304 USA  
Phone: 248-636-1515 · Fax: 248-636-4969  
Email: [Sales@TheSensorConnection.com](mailto:Sales@TheSensorConnection.com)  
Web: [www.TheSensorConnecdtion.com](http://www.TheSensorConnecdtion.com)

03-2018\_REV1