

Input: One to Four 350 Ω Sensors, 0-5 mV to 0-1200 mV, 4-10 VDC Excitation

Output: 0-1 V to ±10 V or 0-1 mA to 4-20 mA, Non-Isolated

- Drive up to Four 350 Ω Bridges
- Adjustable Excitation Power Supply
- One Minute Setup for Hundreds of I/O Ranges
- Easy-to-use External Switches for Setup
- Hot-Swappable Plug-In Design
- Input and Output LoopTracker® LEDs
- Adjustable Output Test
- Internal Calibration Resistor Option

Applications

- Load Cell Weighing Systems and Scales
- Strain Gauge Pressure Sensors and Transducers
- Tanks, Scales, Extruder Melt Pressure, Crane Loads

Input Range

Minimum range: 0 to 5 mV
 Maximum range: 0 to 1200 mV
 Minimum sensitivity: 0.5 mV/V
 Maximum sensitivity: 120 mV/V

Millivolt output range is determined by the sensitivity of the sensor (mV/V) and the excitation voltage applied.

$mV/V \text{ sensitivity} \times \text{excitation voltage} = \text{total mV range}$

Input Impedance

1 MΩ typical

Calibration Resistor Option

M01 option: Toggle switch for internal shunt resistor

Excitation Voltage

Maximum output: 10 VDC maximum at 115 mA
 Drive capability: Up to four 350 Ω bridges at 10 VDC
 Adjustability: Switch-selectable, 0-10 VDC in 1 V increments
 Fine adjustment: ±2.5% via multiturn potentiometer
 Stability: ±0.01% per °C

LoopTracker

Variable brightness LEDs for input/output loop level and status

Output Ranges

	Minimum	Maximum
Voltage:	0-1 VDC	0-10 VDC
Bipolar Voltage:	±1 VDC	±10 VDC
Current:	0-2 mA DC	0-25 mA DC
	20 V compliance, 1000 Ω at 20 mA	

Output Linearity, Ripple & Noise

Better than ±0.1% of span, <10 mV_{rms} ripple and noise

Output Zero and Span

Multi-turn potentiometers to compensate for load and lead variations, ±15% of span adjustment range typical

Zero Offset

±100% of span in 15% increments

Functional Test Button

Sets output to test level when pressed
 Adjustable 0-100% of span
 Not available with M01 option

Response Time

150 milliseconds typical (6.6 Hz)
 DF option: 75 millisecond response time typical (13.3 Hz)
 Contact factory for faster response times

Common Mode Rejection

100 dB minimum

Ambient Temperature Range and Stability



-10°C to +60°C operating ambient
 Better than ±0.02% of span per °C stability

Housing and Sockets

IP 40, plugs into API 011 or API 011 FS socket
 Socket mounts to 35 mm DIN rail or can be surface mounted

Power

Standard: 115 VAC ±10%, 50/60 Hz, 2.5 W max.
 A230 option: 230 VAC ±10%, 50/60 Hz, 2.5 W max.
 P option: 60-265 VAC, 50/60 Hz or 85-300 VDC, 2.5 W typical
 D option: 9-30 VDC, 2.5 W typical

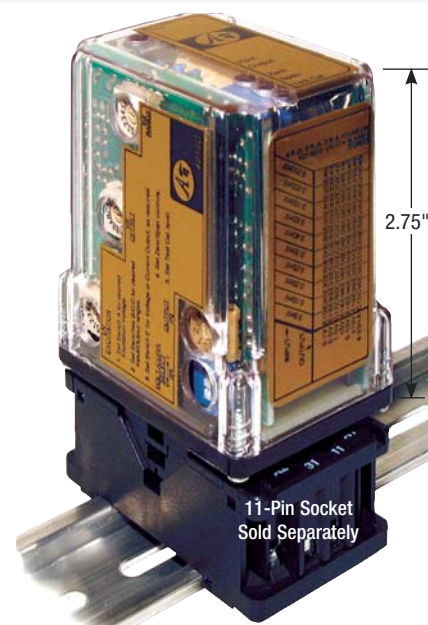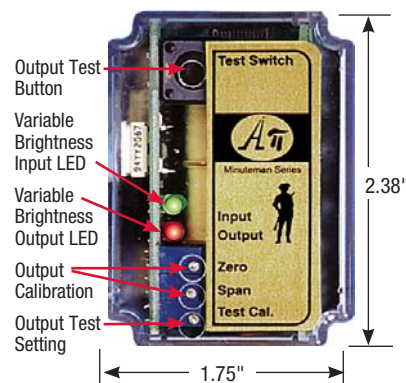

Hot Swappable Plug-In Design



Description

The API 4058 G accepts a strain gauge, bridge, load cell, or a summed input from up to four sensors, and provides a proportional, non-isolated DC voltage or current output. It includes filtering and processing to allow effective use of low-level transducers in the noisy environments found in industrial applications.

The built-in 115 mA bridge excitation power supply generates a stable source of excitation voltage to drive from one to four 350 Ω (or greater) bridge type sensors such as load cells, pressure transducers and strain gauges. The API 4058 G amplifies and converts the resulting millivolt signal into the selected output.

Input, output, excitation, and zero offset are field configurable, via external rotary and slide switches. Common ranges are on the module label. An offset switch is standard for applications requiring cancellation of sensor offsets or non-zero deadweights (taring). Zero and span potentiometers allow calibration of the output.

How to Order

Please specify
 Model **API 4058 G** (operates on 115 VAC)
D for operation on low voltage power
A230 for 230 VAC operation
P for wide ranging power
 Options as required
 Resistor value if ordering M01 option

LoopTracker

API exclusive features include two LoopTracker LEDs (green for input, red for output) that vary in intensity with changes in the process input and output signals. These provide a quick visual picture of your process loop at all times and can greatly aid in saving time during initial startup and/or troubleshooting.

Output Test

An API exclusive feature includes the test button to provide a fixed output (independent of the input) when held depressed. The test output level is potentiometer adjustable from 0 to 100% of output span. The output test button greatly aids in saving time during initial startup and/or troubleshooting.

The output test is not available with the M01 option. A calibration resistor switch replaces the test button.

Mounting

The API 4058 G plugs into an industry standard 11-pin octal socket sold separately. Sockets API 011 and finger-safe API 011 FS allow either DIN rail or panel mounting.

Switches can be pre-set to your specifications.

Please provide
 Bridge mV/V
 Excitation voltage
 Output range

Model	Input	Output	Power
API 4058 G	Field configurable—specify mV/V and excitation voltage if factory is to set switches, specify calibration resistor value, if required	Field configurable Specify range if factory is to set switches	115 VAC
API 4058 G A230			230 VAC
API 4058 G P			60-265 VAC or 85-300 VDC
API 4058 G D			9-30 VDC or 10-32 VAC

Options—add to end of model number

M01 Built-in calibration resistor. Specify resistor value.
DF 75 millisecond response time, or consult factory
U Conformal coating for moisture resistance

Accessories—order as separate line item

API 011 11-pin socket
 API 011 FS 11-pin finger-safe socket
 API TK36 DIN rail, 35 mm W x 39" L, aluminum

Installation Precautions

WARNING! All wiring must be performed by a qualified electrician or instrumentation engineer. Consult factory for assistance. The module is designed to be mounted in a housing or panel. Mount the socket to a 35 mm DIN rail or suitable surface.

Avoid shock hazards! Turn signal input, output, and power off before connecting or disconnecting wiring. Connect power last.

Input Terminals

Refer to wiring diagram at right and strain gauge manufacturer's data sheet for wiring and color coding. Polarity must be observed when connecting inputs. Connect up to 4 strain gauges or load cells. Sensor shield wire (if equipped) should be grounded at one end only.

Excitation Voltage Connection

Polarity must be observed. Never short the excitation leads together. This will cause internal damage to the module.


Signal Output Terminals

Polarity must be observed when connecting the signal output. Current output provides power to the output loop (sourcing).

Module Power Terminals


The module operating voltage shown on the white model/serial number label must match available power. AC power can be connected with either polarity. Polarity MUST be observed for DC powered modules.

Output	0-1 V	0-2 V	0-4 V	1-5 V	0-5 V	0-8 V	2-10 V	0-10 V	±5 V	±10 V	0-2 mA	2-10 mA	0-10 mA	0-16 mA	4-20 mA	0-20 mA
Switches	BCDE	BCDE	BCDE	BCDE	BCDE	BCDE	BCDE	BCDE	BCDE	BCDE	BCDE	BCDE	BCDE	BCDE	BCDE	BCDE
Input																
0-5 mV	E10V	E11V	E12V	C12V	E13V	E15V	C15V	E16V	E18V	E19V	E10I	C12I	E13I	E15I	C15I	E16I
±10 mV					A33V			A36V	A38V	A39V					A35I	
0-10 mV	E90V	E91V	E92V	C92V	E93V	E95V	C95V	E96V	E98V	E99V	E90I	C92I	E93I	E95I	C95I	E96I
±20 mV					AB3V			AB6V	AB8V	AB9V					AB5I	
0-20 mV	E30V	E31V	E32V	C32V	E33V	E35V	C35V	E36V	E38V	E39V	E30I	C32I	E33I	E35I	C35I	E36I
0-25 mV	E50V	E51V	E52V	C52V	E53V	E55V	C55V	E56V	E58V	E59V	E50I	C52I	E53I	E55I	C55I	E56I
±30 mV					A03V			A06V	A08V	A09V					A05I	
0-30 mV	ED0V	ED1V	ED2V	CD2V	ED3V	ED5V	CD5V	ED6V	ED8V	ED9V	ED0I	CD2I	ED3I	ED5I	CD5I	ED6I
0-40 mV	EB0V	EB1V	EB2V	CB2V	EB3V	EB5V	CB5V	EB6V	EB8V	EB9V	EB0I	CB2I	EB3I	EB5I	CB5I	EB6I
0-50 mV	E00V	E01V	E02V	C02V	E03V	E05V	C05V	E06V	E08V	E09V	E00I	C02I	E03I	E05I	C05I	E06I
0-100 mV	E80V	E81V	E82V	C82V	E83V	E85V	C85V	E86V	E88V	E89V	E80I	C82I	E83I	E85I	C85I	E86I
0-200 mV	E20V	E21V	E22V	C22V	E23V	E25V	C25V	E26V	E28V	E29V	E20I	C22I	E23I	E25I	C25I	E26I
0-250 mV	E40V	E41V	E42V	C42V	E43V	E45V	C45V	E46V	E48V	E49V	E40I	C42I	E43I	E45I	C45I	E46I
0-300 mV	EC0V	EC1V	EC2V	CC2V	EC3V	EC5V	CC5V	EC6V	EC8V	EC9V	EC0I	CC2I	EC3I	EC5I	CC5I	EC6I
0-400 mV	EA0V	EA1V	EA2V	CA2V	EA3V	EA5V	CA5V	EA6V	EA8V	EA9V	EA0I	CA2I	EA3I	EA5I	CA5I	EA6I
±500 mV	A60V	A61V	A62V	AE3V	A63V	A65V	AE6V	A66V	A68V	A69V	A60I	AE3I	A63I	A65I	AE6I	A66I
0-1000 mV	E60V	E61V	E62V	C62V	E63V	E65V	C65V	E66V	E68V	E69V	E60I	C62I	E63I	E65I	C65I	E66I
0-1200 mV	EE0V	EE1V	EE2V	CE2V	EE3V	EE5V	CE5V	EE6V	EE8V	EE9V	EE0I	CE2I	EE3I	EE5I	CE5I	EE6I

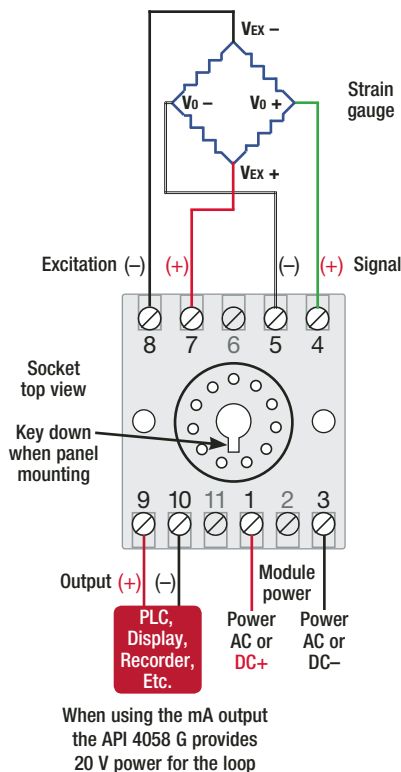

Excitation Voltage and Range Selection

The API 4058 G excitation voltage, input, and output are switch selectable via rotary switches and a slide switch on the side of the module. Common ranges are listed on the module label.

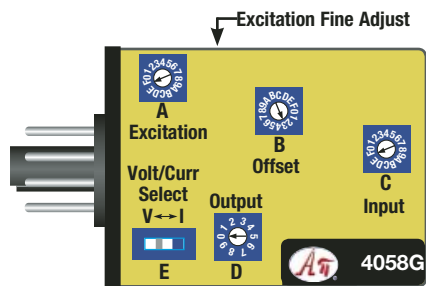

Excitation	10V	9V	8V	7V	6V	5V	4V	3V	2V	1V	0V
Switch A	A	9	8	7	6	5	4	3	2	1	0

1. See table above and set Excitation rotary switch **A** to the desired voltage. The excitation voltage should match the sensor manufacturer's recommendations.
2. From the table, find the switch combination that match your input/output range and set rotary switches **B**, **C**, and **D**.
3. Set the Volt/Curr slide switch **E** to V for voltage or I for current, depending on the output type.

Calibration

Top-mounted Zero and Span potentiometers are used to fine-tune the output signal. An excitation voltage fine adjust potentiometer is located on the side of the module.

This procedure does not account for offsets or tare weight calibration. To achieve optimum results, it is recommended that the API 4058 G be calibrated using an accurate bridge simulator before being placed in service.

1. Apply power to the module and allow a minimum 20 minute warm up time.
2. Measure the voltage across terminals 7 and 8 and adjust the excitation voltage fine adjust potentiometer for the exact voltage desired.
3. Provide an input to the module equal to zero or the minimum input required for the application.
4. Using an accurate measurement device for the module output, adjust the Zero potentiometer for the exact minimum output desired. The Zero control should only be adjusted when the input signal is at its minimum. This will produce the corresponding minimum output signal.
- 5a. Span calibration for standard models. Set the input at maximum, and then adjust the Span potentiometer for the exact maximum output desired. The Span control should only be adjusted when the input signal is at its maximum. This will produce the corresponding maximum output signal.
- 5b. Span calibration with M01 option only. The M01 option uses a shunt resistor installed internally in the API 4058 G. The resistance is specified by the transducer manufacturer. Before starting calibration, ensure that the correct resistance value was specified.

The sensor manufacturer should provide the percentage of full-scale output for the transducer when using the internal resistor for calibration (typically 80%).

- i. Set the Test toggle switch to the Test position. The internal shunt resistor is switched into the circuit to unbalance the bridge.
- ii. Adjust the Span pot for an 80% full-scale output or 80% reading on the process indicator.
- iii. Return the TEST switch to the opposite position and readjust the zero pot if necessary.

6. The calibration procedure should be repeated several times to achieve the desired accuracy over the selected range.

Output Test Function

Note that models with the M01 option do not have a TEST function. With this option the Test switch operates the calibration resistor and the Test Cal. potentiometer is non-functional.

The output test potentiometer is factory set to provide approximately 50% output. When the test button is depressed it will drive the output with a known good signal that can be used as a diagnostic aid during initial start-up or troubleshooting. When released, the output will return to normal.

The Test Cal. potentiometer can be used to set the test output to the desired level. It is adjustable from 0 to 100% of the output span. Press and hold the Test button and adjust the Test Cal. potentiometer for the desired output level.

Operation

Strain gauges and load cells are normally passive devices that are commonly referred to as bridges due to their four-resistor Wheatstone bridge configuration. These sensors require a precise excitation source to produce an output that is directly proportional to the load, pressure, etc. that is applied to the sensor.

The exact output of the sensor (measured in millivolts) is determined by the sensitivity of the sensor (mV/V) and the excitation voltage applied. For example, a load cell rated for 3 mV/V sensitivity and 10 VDC excitation will produce an output of 0 to 30 mV for load variations from 0 to 100%.

3 mV/V sensitivity X 10 VDC excitation = 30 mV range

The API 4058 G provides a precise excitation voltage to the sensors and receives the resulting millivolt signal in return. This input signal is filtered and amplified, then offset, if required, and passed to the output stage. Depending on the output configuration selected, a DC voltage or current output is generated.

GREEN LoopTracker® Input LED – Provides a visual indication that a signal is being sensed by the input circuitry of the module. It also indicates the input signal level by changing in intensity as the process changes from minimum to maximum. If the LED fails to illuminate, or fails to change in intensity as the process changes, this may indicate a problem with module power or signal input wiring.

RED LoopTracker Output LED – Provides a visual indication that the output signal is functioning. It becomes brighter as the input and the corresponding output change from minimum to maximum. For current outputs, the RED LED will only light if the output loop current path is complete. For either current or voltage outputs, failure to illuminate or a failure to change in intensity as the process changes may indicate a problem with the module power or signal output wiring.

API maintains a constant effort to upgrade and improve its products. Specifications are subject to change without notice. Consult factory for your specific requirements.